




How to install the Start control thermostat probe on SolarVenti models with integrated fan.


(NOTE: On SolarVenti with fans mounted on the outside, disregard this manual! and just insert the probe before fitting the fan perforated metal plate)




BEFORE INSTALLATION NOTE: To insert the control thermostat probe into SolarVenti, it is very important to make sure not to pierce the filter within the panel with the drill bit. How can I avoid it?: With a drill bit of 1mm or any other very fine tool, gently push the filter 1 to 2 cm away from the panel back plate through the holes on the perforated plate.

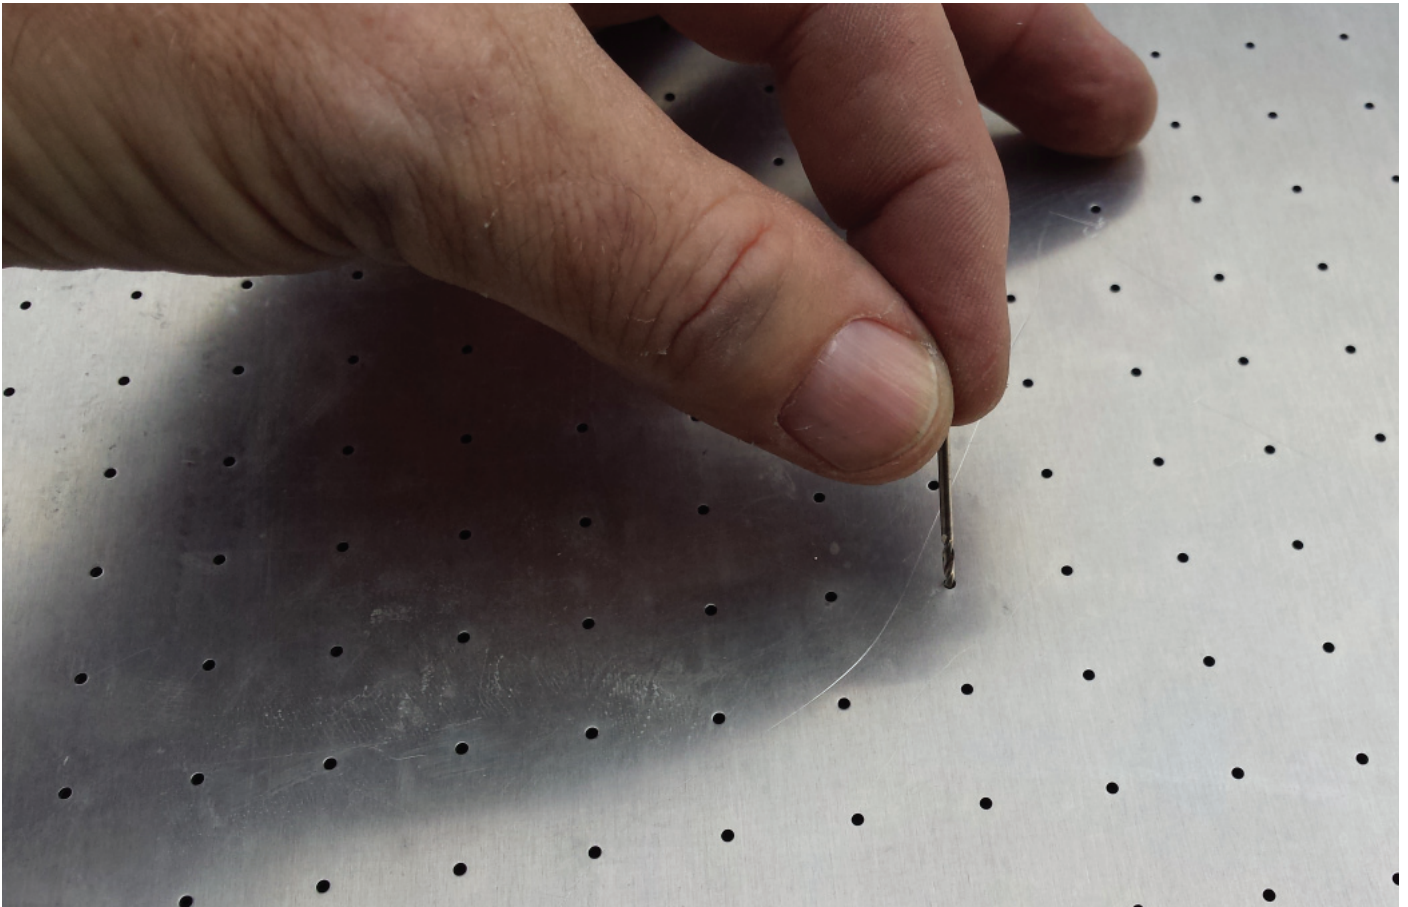


1. Maintaining the filter away, start drilling the aluminum rear plate with a bit equal to the diameter of the probe size.
2. Drill slowly and with great care not to pierce the filter when penetrating the aluminum-perforated plate

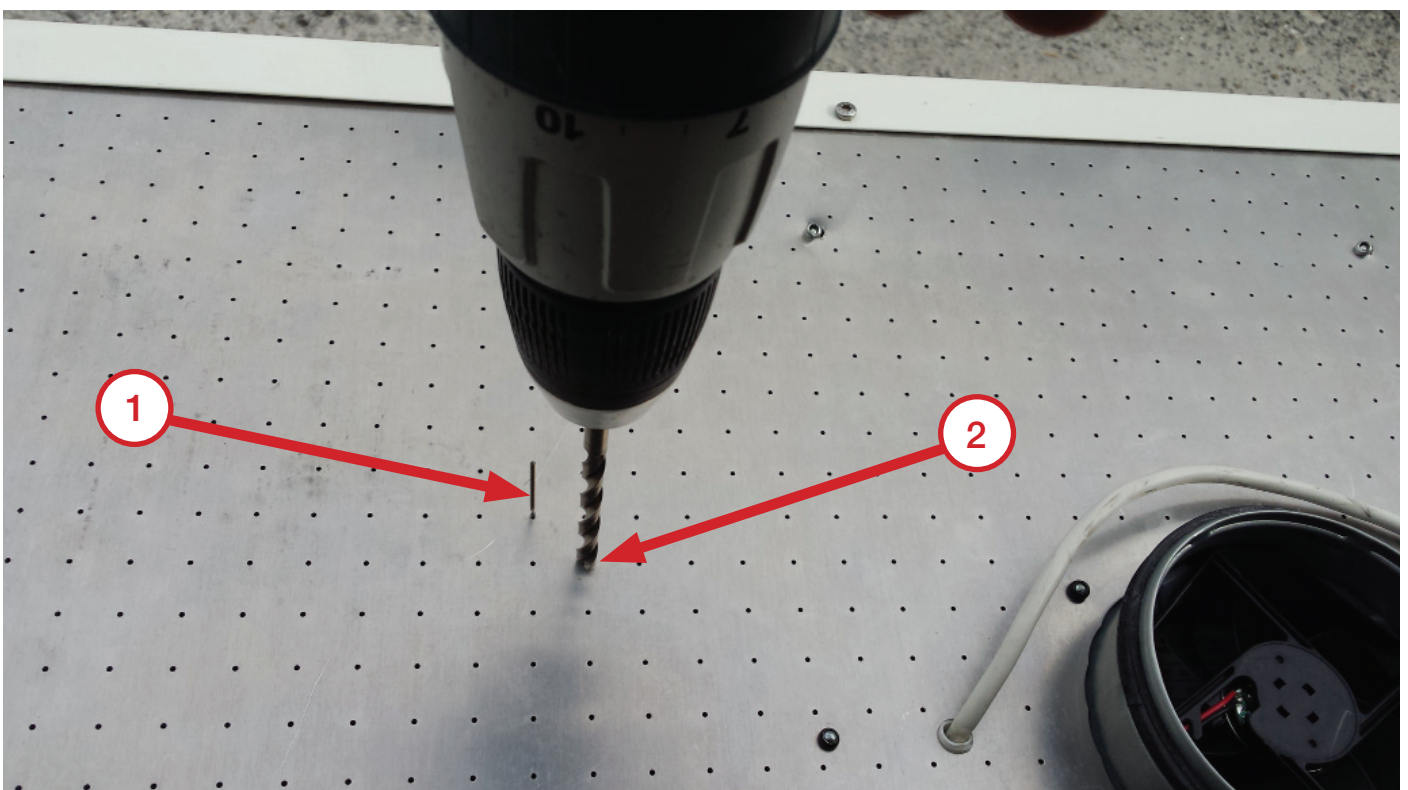


Result: The filter inside the panel remains intact.

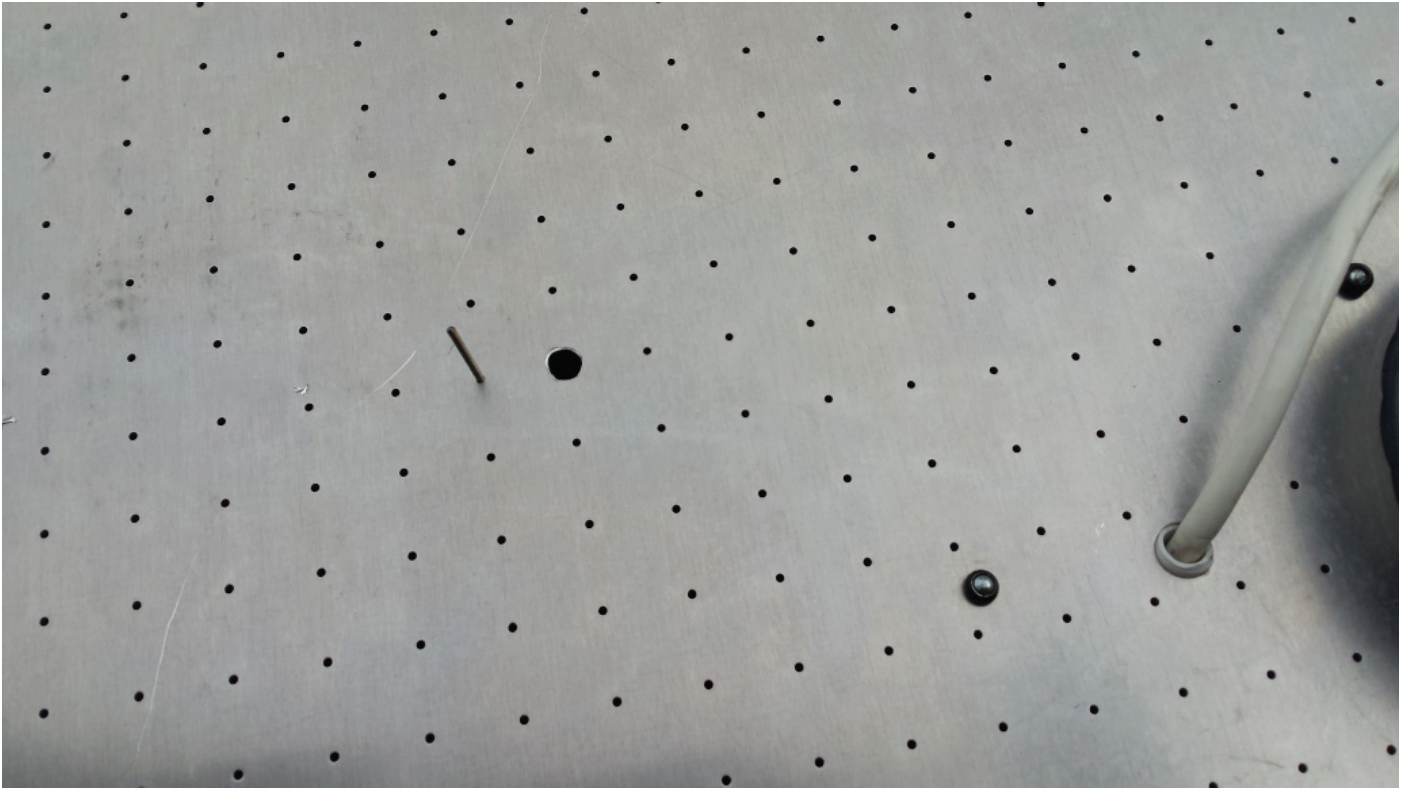

3. Now carefully drill with an inclination to open an oval hole. Be very careful not to drill into the filter!

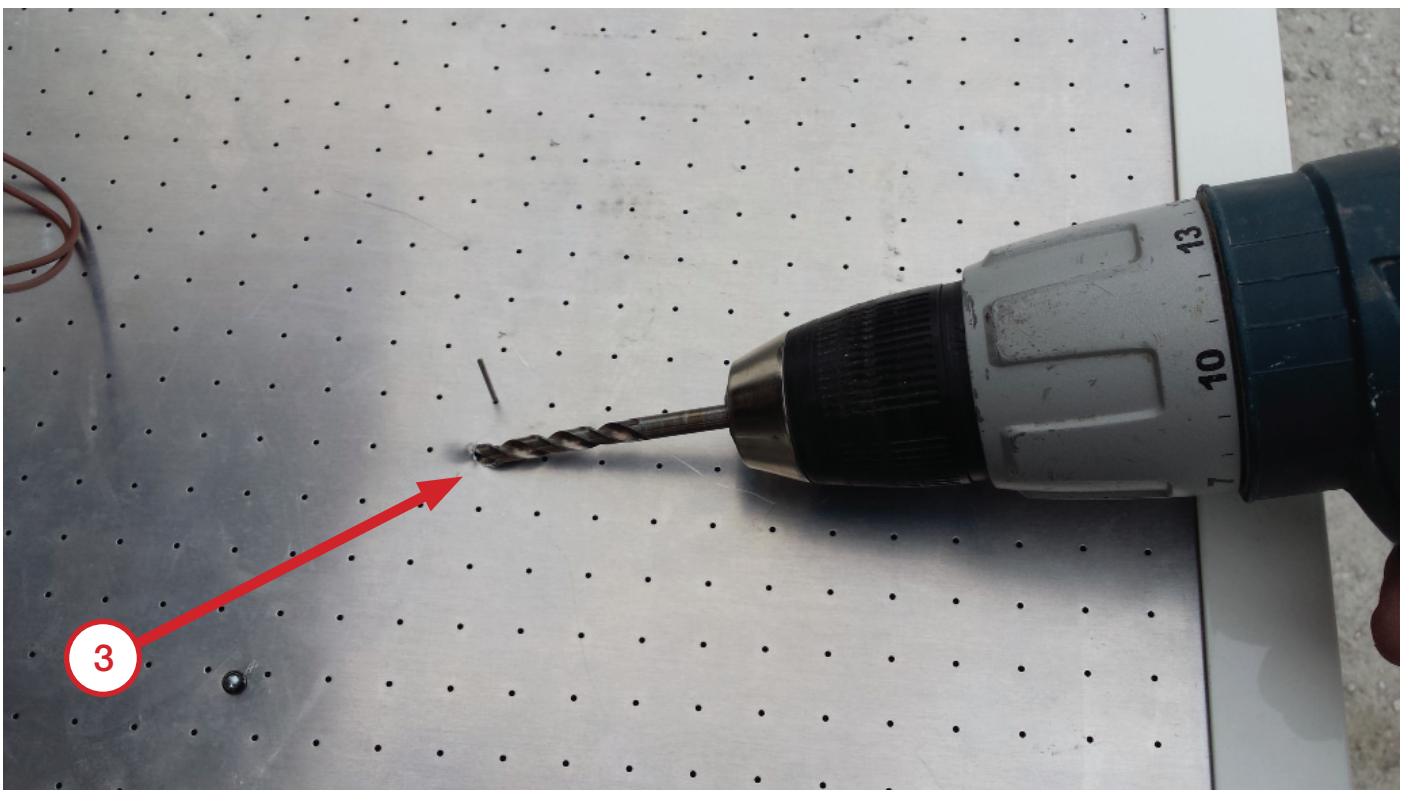

Result: The internal filter remains intact and we now have an oval hole.

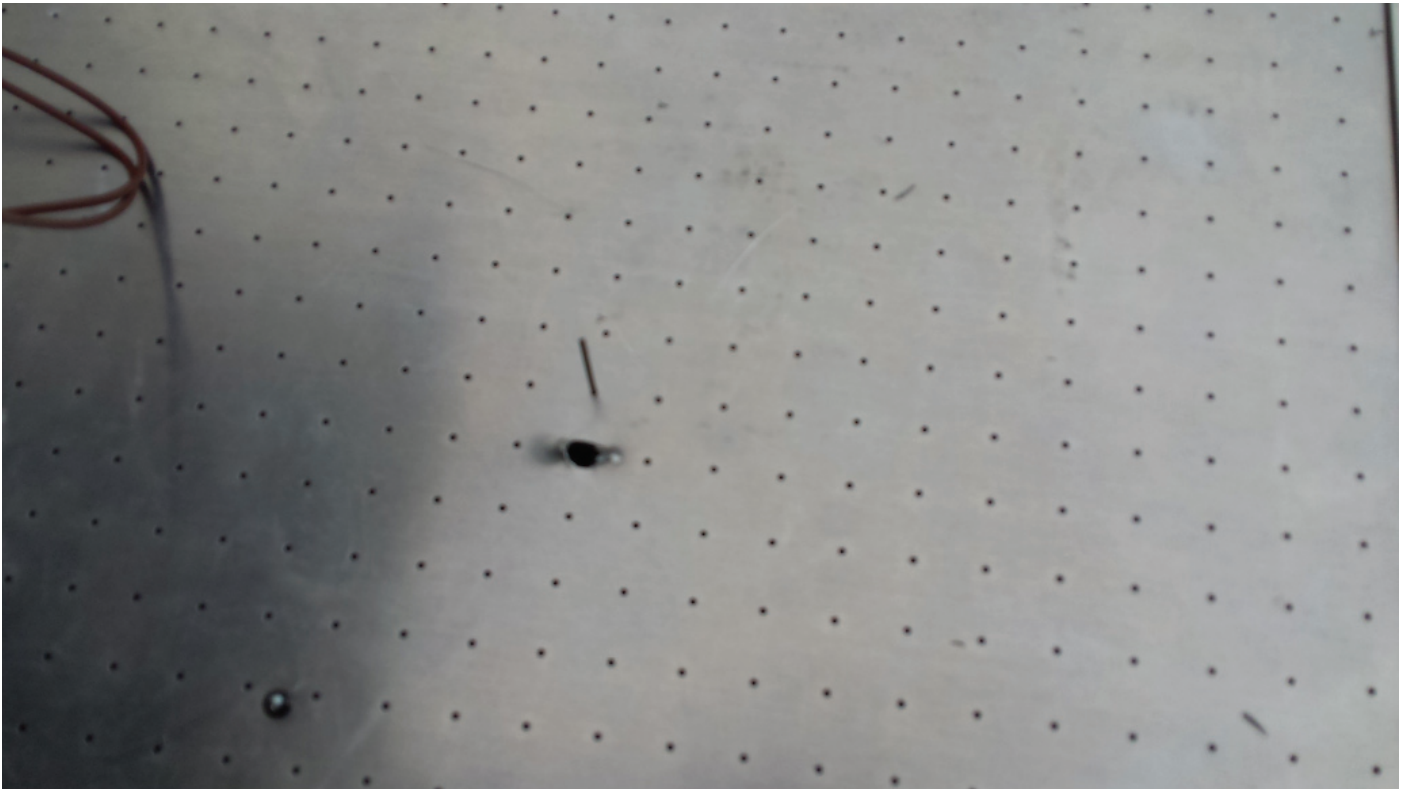

This way the probe can be introduced inclined into the panel.
The hole can be plugged with caulk, although it is not important, as the filter is intact.

